

# Tonic Decorative Front

Model: SLR, SLR-B

## Installation & Operating Instructions

# HEAT & GLO™

No one builds a better fire



Leave this manual with party responsible for use and operation.

**CAUTION! Risk of Cuts or Abrasions.** Wear protective gloves and safety glasses during installation. Sheet metal edges are sharp.

**CAUTION! Do not install damaged components.**

### ⚠ WARNING



**HOT! DO NOT TOUCH.**  
**SEVERE BURNS MAY RESULT.**  
**CLOTHING IGNITION MAY RESULT.**



Glass and other surfaces are hot during operation and cool down.

- Keep children away.
- CAREFULLY SUPERVISE children in same room as appliance.
- Alert children and adults to hazards of high temperatures.
- Do NOT operate with protective barriers open or removed.
- Keep clothing, furniture, draperies and other combustibles away.

**WARNING! Risk of Fire.** Under no circumstances can combustible material overlap decorative front.

#### CONTENTS:

- Decorative Front Assembly
- Four 1 inch Phillips head screws
- Mesh screen and four mesh clips

Verify and remove contents from packaging before beginning installation.

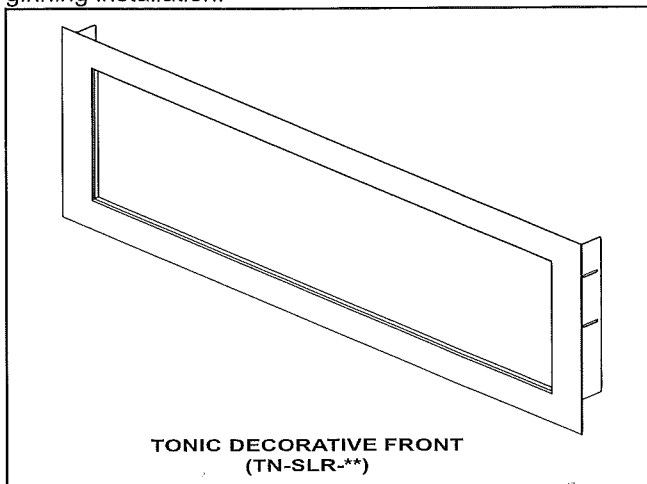


Figure 1. Tonic Decorative Front

### Installation Instructions

1. Remove primary fireplace glass assembly from fireplace. Place the glass assembly on the box in which the decorative front was packaged.
2. Locate the four slots in the glass frame assembly. These will correspond to four mesh clips on the mesh frame assembly. See Figure 2.
3. Snap the four mesh clips into the four corresponding slots in the glass frame assembly. See Figure 3. Ensure that the mesh frame assembly is installed tightly on glass so that the spline is projecting outward from the fireplace. See Figure 2.
4. Reinstall glass/mesh assembly into fireplace and engage glass clips.

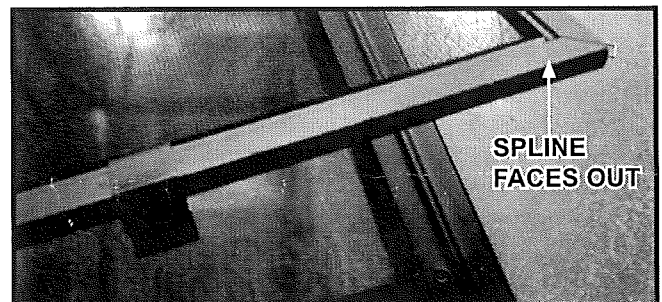


Figure 2. Location of Mesh Clips.

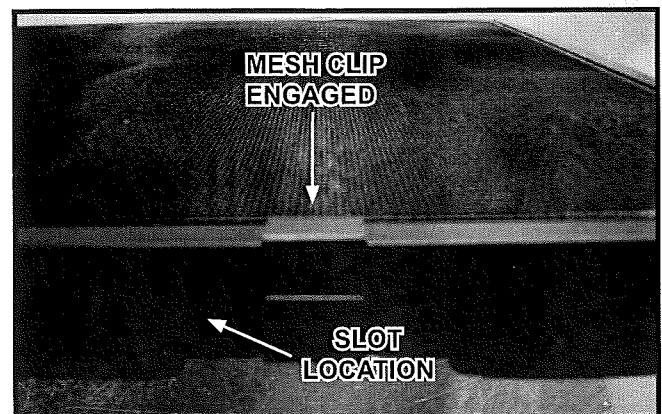


Figure 3. Mesh Clips Installed.

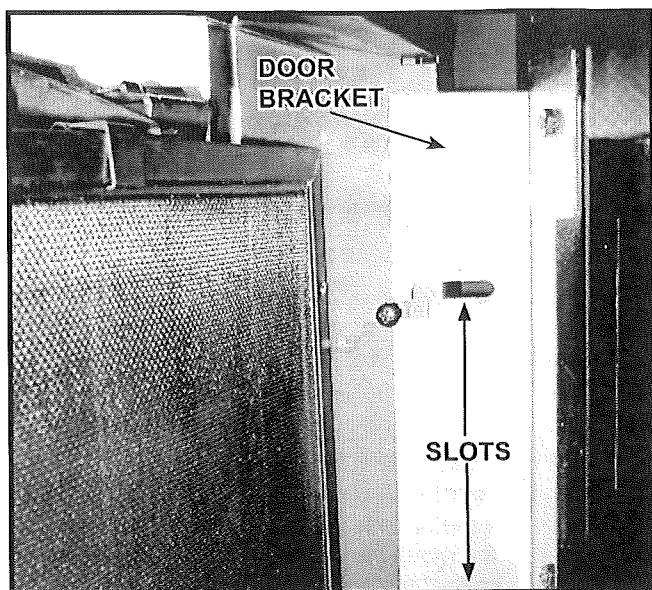


Figure 4. Location of Rivnuts Right and Left Side of Fireplace Opening.

5. Install all four fasteners, but do not tighten completely.
6. Install the door into the fireplace opening. Note the orientation of the door brackets. The slots in the bracket will only line up with the rivnuts in the fireplace if the door is installed correctly. See Figure 4.
7. Push front towards fireplace while holding decorative front firmly in place and tightening the top two left and right screws, followed by the bottom two left and right screws. See Figure 5.

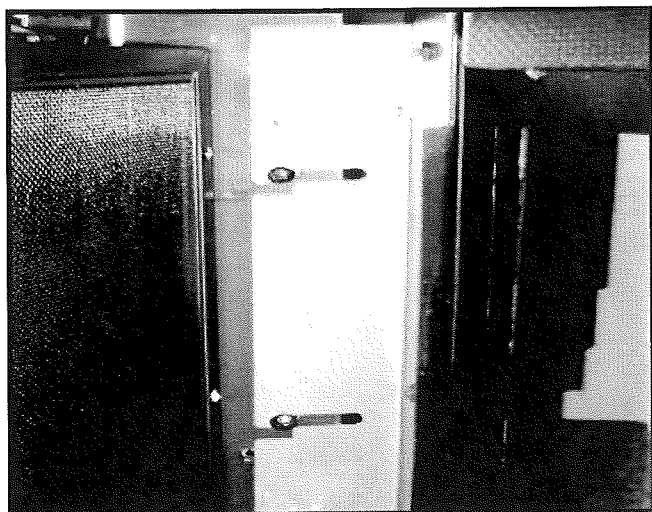


Figure 5. Screws Installed.

### Removing and Replacing Fixed Glass Assembly

**WARNING! Risk of Asphyxiation!** Handle fixed glass assembly with care. Inspect the gasket to ensure it is undamaged and inspect the glass for cracks, chips or scratches.

- **DO NOT** strike, slam or scratch glass.
- **DO NOT** operate fireplace with glass removed, cracked, broken or scratched.
- Replace as a complete assembly.

### Removing Fixed Glass Assembly

1. Remove the decorative front.
2. Locate the two spring latches that are on the upper left and right of the fireplace.
3. Use both index fingers to release spring latches.
4. Allow glass to tilt forward. Grasp glass on the upper right and left sides and lift glass "up" and "out."

### Replacing Fixed Glass Assembly

1. Grasp glass on upper right and left sides and tilt bottom of glass assembly toward fireplace.
2. Allow of the bottom gasketing of the glass assembly to touch the face of the fireplace.
3. Put pressure on the glass as you allow the glass assembly to drop into the two lower glass clips.
4. Tilt top of glass towards fireplace and engage both top spring latches.

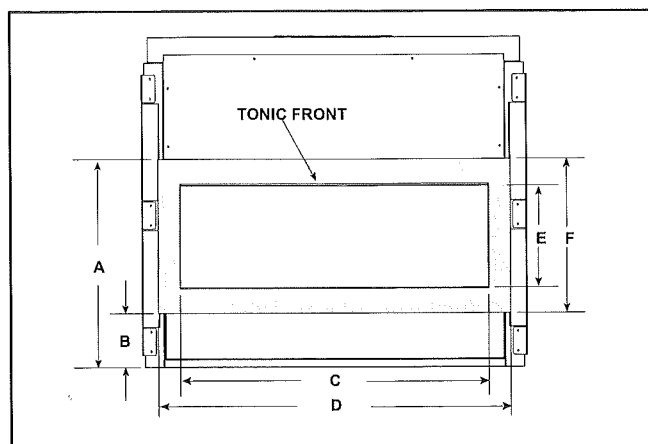


Figure 5. Dimensions of Tonic Decorative Front.

Table 1. Dimensions of Tonic Decorative Front.

A	Top of decorative front to bottom of appliance.	26-3/8 in.	670 mm
B	Bottom of decorative front to bottom of appliance.	6-7/8 in.	175 mm
C	Inside dimension of decorative front (width).	39 in.	991 mm
D	Outside dimension of decorative front (width).	44-1/2 in.	1130 mm
E	Inside dimension decorative front (height).	12-7/8 in.	327 mm
F	Outside dimension of decorative front (height).	19-1/2 in.	495 mm

### Service Parts

PART #	DESCRIPTION
SRV-SLR-TN-RED	Tonic Replacement Front, Red
SRV-SLR-TN-NB	Tonic Replacement Front, New Bronze
SRV-SLR-TN-GY	Tonic Replacement Front, Grey
SRV-SLR-TN-GT	Tonic Replacement Front, Graphite
SRV-SLR-TN-EB	Tonic Replacement Front, Ebony
SRV-SLR-MESH	Tonic Replacement Front, Mesh
2143-901A	Manual Bag Assembly Hardware

## Model: XLR-CE, XLR-AU, XLR-PLUS

### Mesh Instructions

1. Install upper and lower glass heat shields in glass frame assembly as shown in Figure 7.

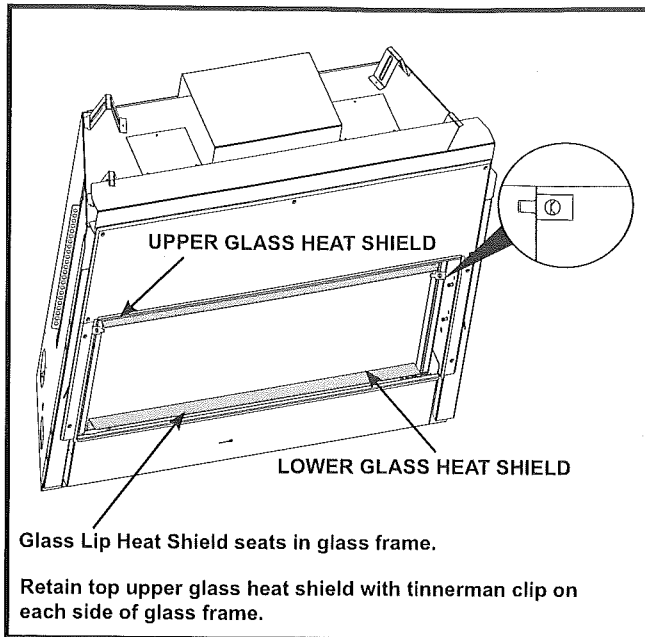


Figure 7. Glass and Heat Shield

2. Line up holes on mesh brackets with pilot holes on mesh. Install mesh brackets to Mesh panel with 4 screws included as shown in Figure 8.

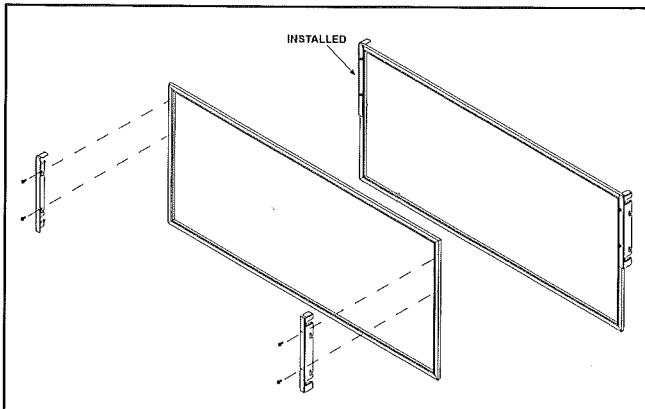


Figure 8. Install Mesh Bracket

3. Install mesh assembly into door opening such that it rests on the bottom two glass plates. See Figure 9.

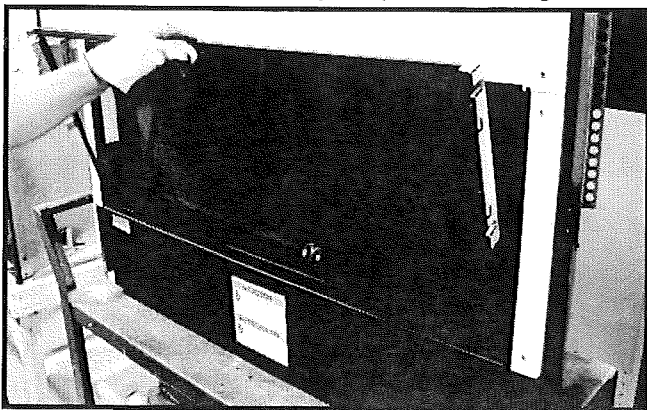


Figure 9. Install Mesh Assembly

4. Place mesh into position with retaining bolts removed. See Figure 10.
5. Install 2 Phillips screws into the 2 riv nut holes on the left and right sides of the fireplace opening Fig 10. Do not tighten screws. See Figure 11.
6. Thread retaining bolts into mating threads to retain mesh as shown. See Figures 10 and 11.

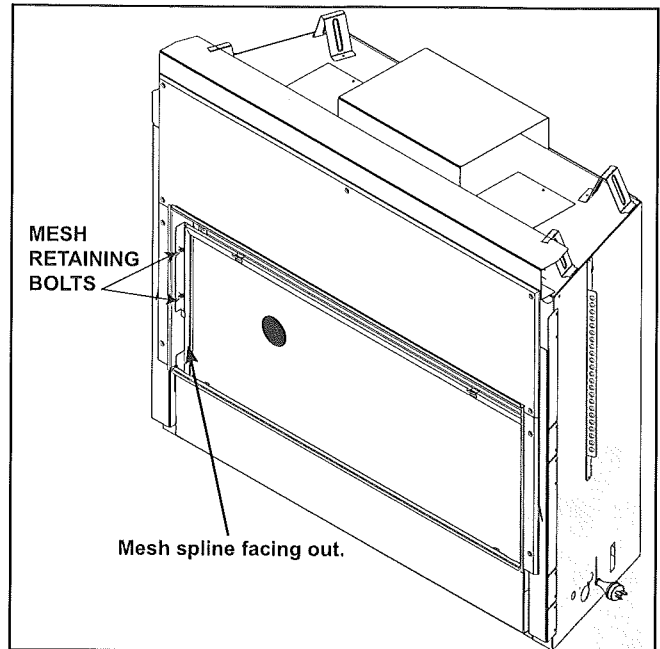


Figure 10. Mesh Installation

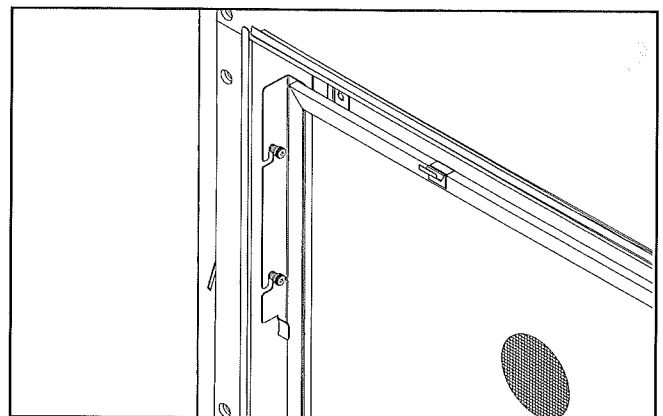


Figure 11. Do Not Tighten Screws

4. Install Tonic front as shown below. The mounting bracket on the Tonic door slide between the mesh brackets and the left and right side of the fireplace opening Fig 12 & 13.

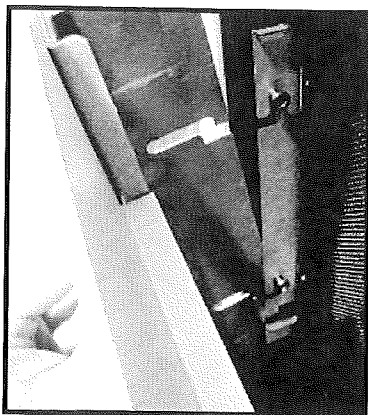


Figure 12. Install Front on Mounting Bracket

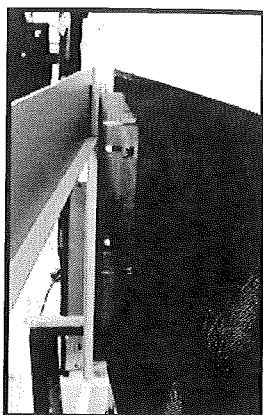


Figure 13. Install Front on Mounting Bracket

5. Slide Tonic front towards the fireplace.

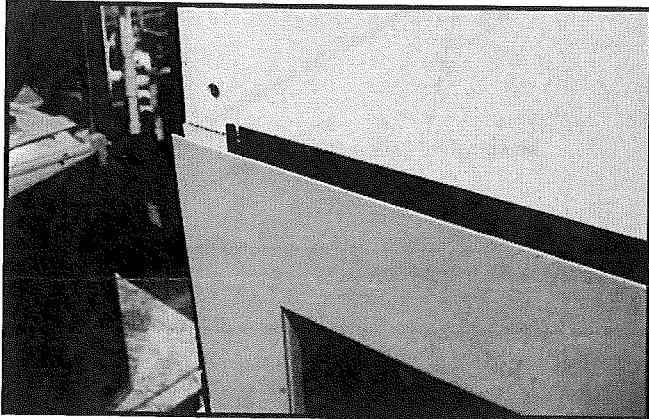


Figure 14. Front Installation

6. Tighten the 4 phillips screws to secure the Tonic front to the fireplace Fig 15.

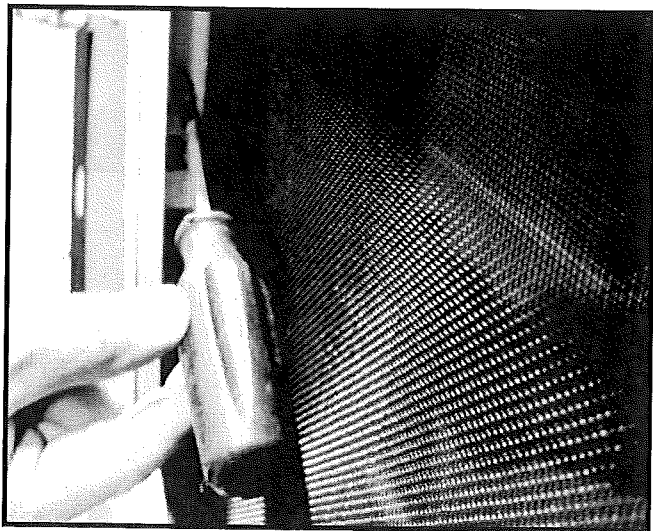


Figure 15. Tighten Phillips Screws

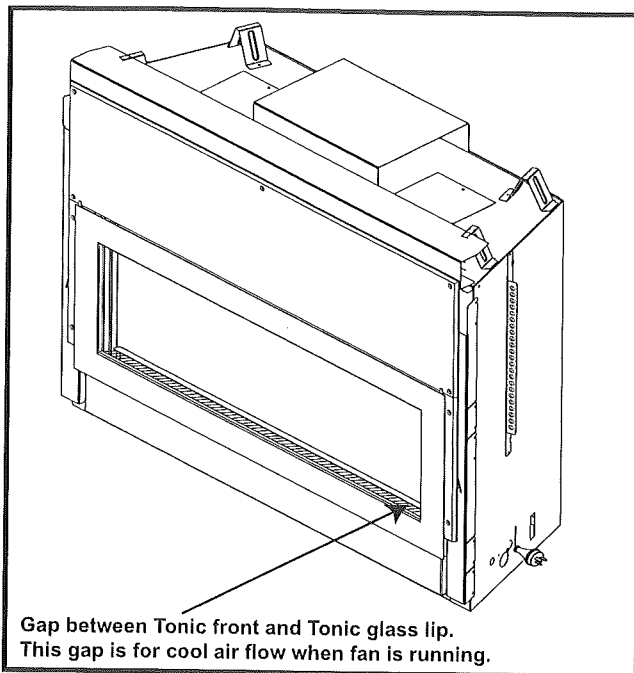


Figure 16. Tonic Front Gap

#### Cleaning Instructions for Fronts

Use a microfiber cloth and Windex® Original Glass Cleaner or 03M003 Stove Bright® Glass Cleaner to clean the front immediately after installation to remove acids deposited by the installer or technician. Spray the cleaner onto the microfiber cloth and carefully wipe the entire surface. The front should be cleaned in this manner annually by the homeowner to remove fingerprints or other contaminants. Once oxidation of the paint pigment has occurred, cleaning will not restore the original color.

Please contact your Heat & Glo dealer with any questions or concerns.

For the location of your nearest Heat & Glo dealer, please visit [www.heatnglo.com](http://www.heatnglo.com).

Heat & Glo, a brand of Hearth & Home Technologies Inc.  
7571 215th Street West, Lakeville, MN 55044  
[www.heatnglo.com](http://www.heatnglo.com)