

Attaching the safety screen to a Jetmaster Universal wood or gas fireplace.



Step 1

Lift the screen with both hands from the handles, and hook (the lug) on to the top left hand corner of the firebox behind the flange as shown.



Step 2

Angle the screen at app 45 degrees so it sits into place into the top right hand corner with the lugs hooking in behind the flange.



Step 3

Allow the screen to drop down gently into place, flush to the firebox.



Step 4

To remove the screen - reverse the above steps, and place into the optional screen stand.

Jetmaster

NSW: 02 9597 7222 • VIC: 03 9429 5573 • QLD: 07 3263 4955 • WA: (Fireplace Corner) 08 9228 2600 • SA: 08 8371 1222 • ACT: 02 6280 6021
Web: www.jetmaster.com.au