

QUADRA-FIRE®

DOOR & DOOR HANDLE INSTRUCTIONS

INSTALL NEW DOOR


1. Place the hinge pins into the hinge holes on the left side of door.
2. Place the door on the front of the appliance, carefully lining it up with the appliance hinge holes.
3. If the door is not level:

BOTTOM RIGHT CORNER LOW: Tap Hinge A outward (away from door opening) and tap Hinge B inward (toward door opening).

BOTTOM RIGHT CORNER HIGH: Tap Hinge A inward and Hinge B outward.

NOTE: It is important to move both hinges an equal distance to ensure the proper operation of the door latch.

4. Door rope may be stiff, which will make the door hard to close at first, with time it will break in.

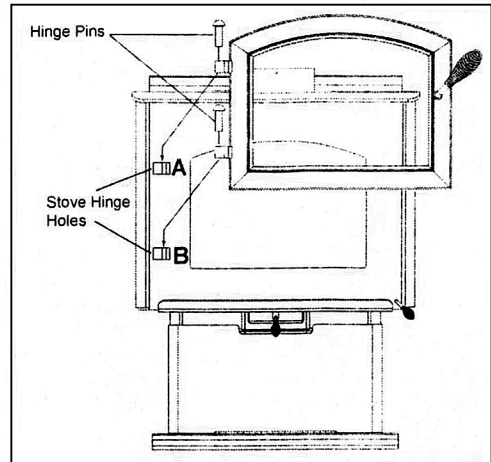

INSTALL NEW DOOR HANDLE

Included in Kit: 1 door handle, 1 key, 2 or more washers, 1 latch cam, 1 locknut, (1 Secondary Latch for Models 4300 & 5700 only, discard for other models). **Figure 2.**

Tools Needed: Open end wrench, penetrating oil (WD40)

REMOVE OLD HANDLE:

1. Open door of appliance and apply oil to locknut, allow 15 minutes penetration time.
2. Hold handle in one hand, use wrench to loosen and remove nut.
3. Slide latch cam off of shaft and remove key and pull shaft through door.




INSTALL NEW DOOR HANDLE

1. Install washer on door handle shaft and slide door handle through door.
2. Install second washer(s) as shown and install key in groove.
3. Align groove in latch cam with key; slide latch cam over shaft.
4. Install secondary latch for Models 4300 and 5700 only, discard for other models. Install locknut.

CAUTION! DO NOT OVERTIGHTEN LOCKNUT. DOOR HANDLE NEEDS TO MOVE SMOOTHLY.

5. Install spring handle using a counter-clockwise motion to desired location on handle except for models shown in Figures 2 & 3 which have a required clearance.

NOTE: Models may need a different number of spacing washers than shown in these diagrams.

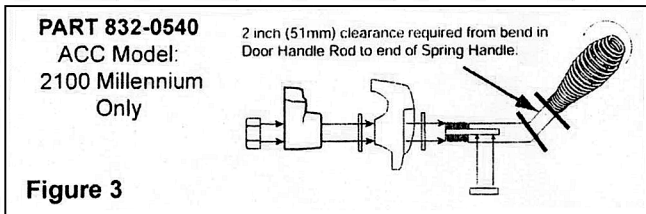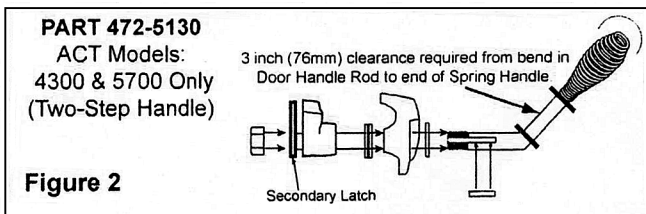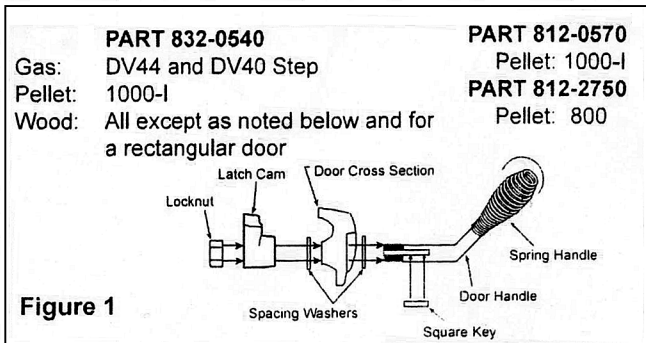

When ordering a Door Handle Assembly, you must order the Spring Handle Separately.