CONTRACTOR 1000 AND 1200

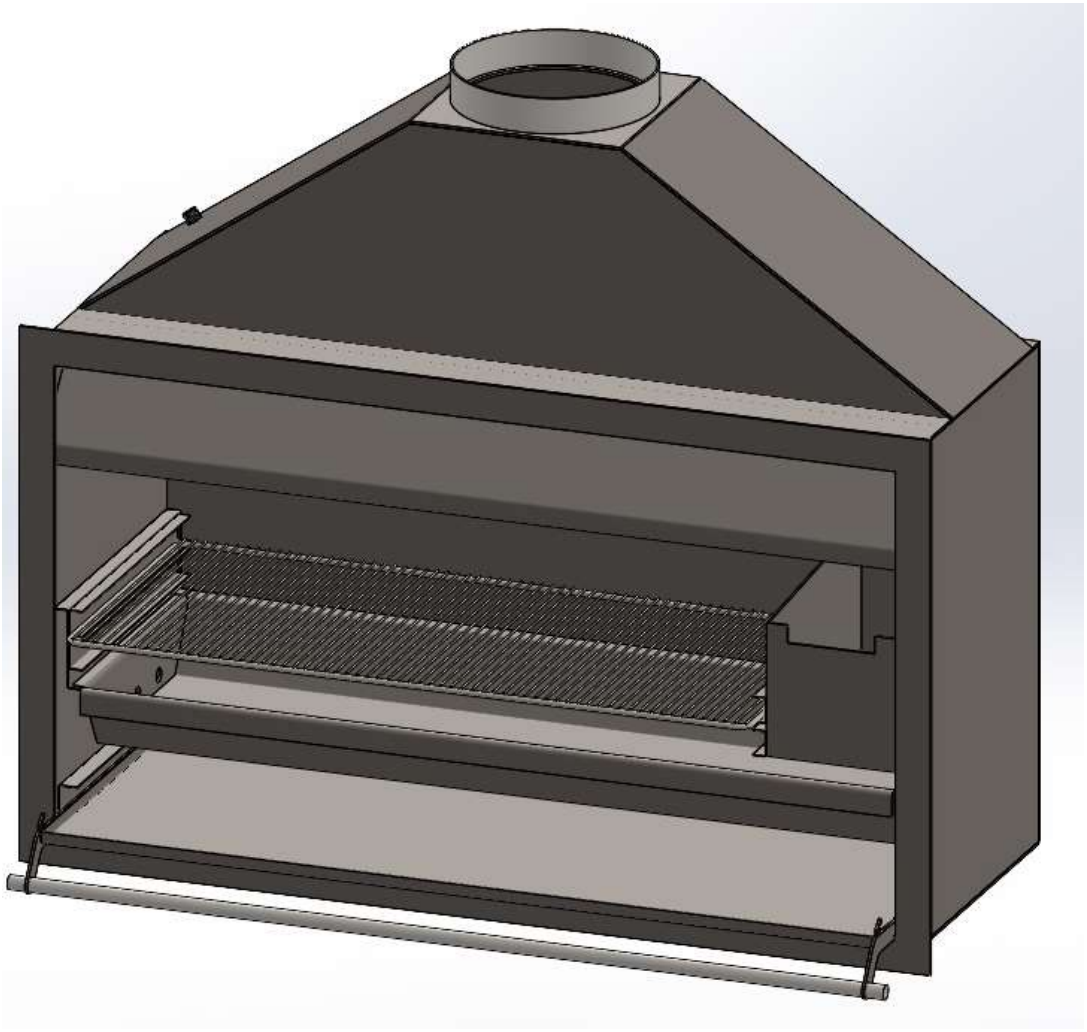

IMPORTANT:

INSTALLER, PLEASE LEAVE THESE INSTRUCTIONS WITH THE UNIT ON COMPLETION.

Head Office – 13 French Avenue, Brendale, Queensland 4500
Telephone – PH: (07) 3490 5500
Facsimile – FAX: (07) 3490 5520
Website: - www.jetmaster.com.au
Business hours: - Monday to Thursday 7:30am-4:00pm. Friday 7:30am-2:00pm
Email: - sales@jetmaster.com.au

CONTRACTOR 1000 AND 1200
DIMENSIONS

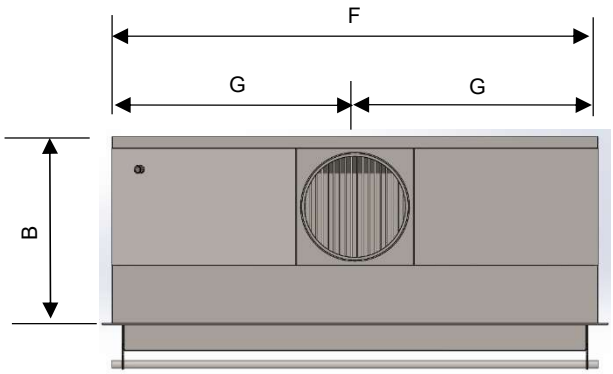

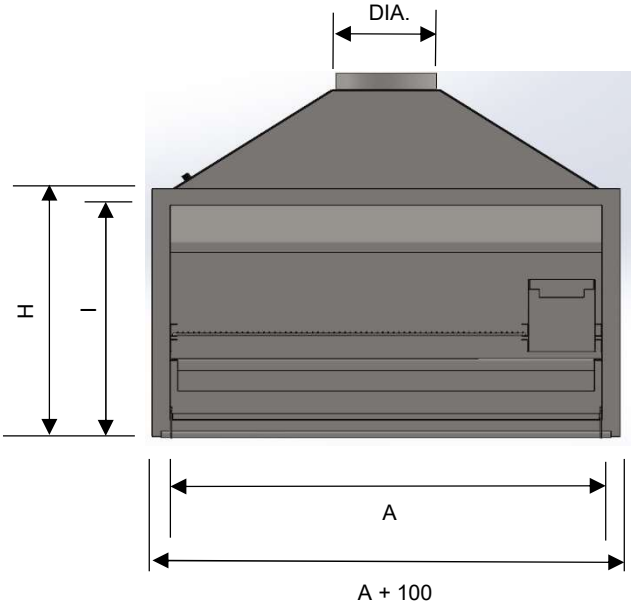

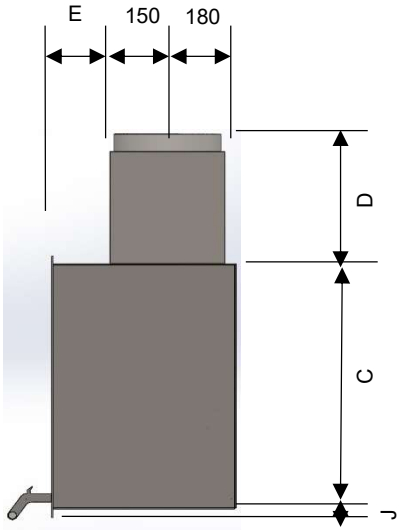

MODEL	MEASUREMENT										FLUE SIZE
	A	B	C	D	E	F	G	H	I	J	DIA.
1000	1000	475	710	240	148	1045	522.5	750	700	23	254
1200	1200	475	710	325	148	1248	622.5	776	726	25	279.4

CONTRACTOR 1000 AND 1200
LIGHT FITTING INSTRUCTION

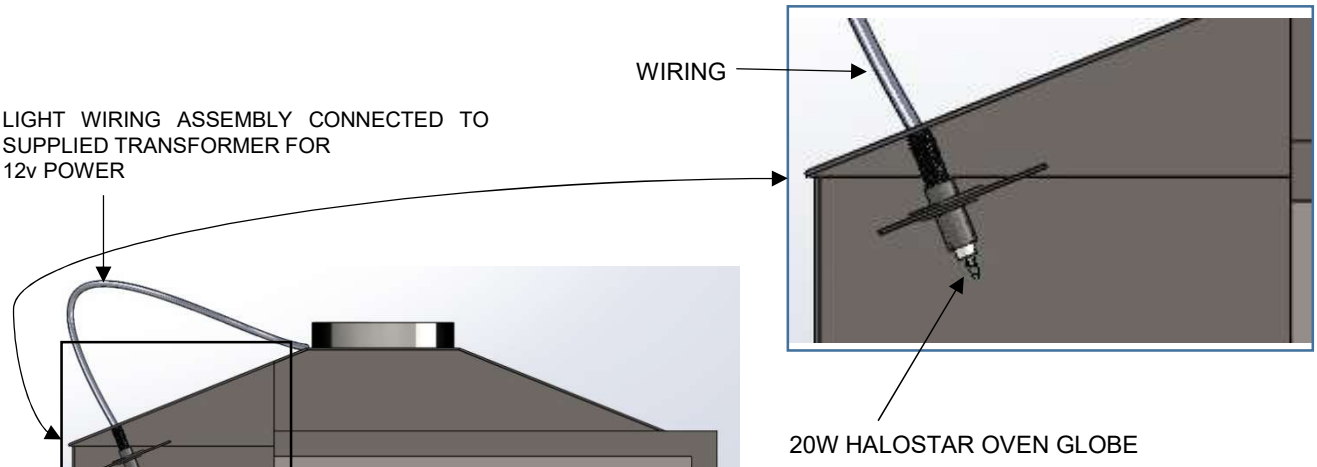

IMPORTANT:
DO NOT CONNECT 240v DIRECTLY TO SUPPLIED UNIT. TRANSFORMER MUST BE USED

LIGHT ASSEMBLY KIT SUPPLIED:

1. 20W HALOSTAR OVEN GLOBE
2. WIRING
3. 12v a.c. OUTPUT TRANSFORMER

WIRING DIAGRAM

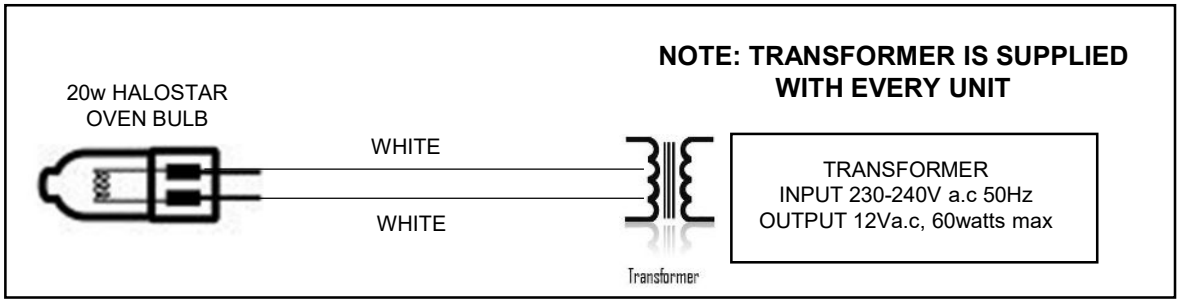

CONTRACTOR 1000 AND 1200 LIGHT FITTING INSTRUCTION

REMOVE ALL WASHERS AND NUT FROM THE WIRING. THEN ATTACH THE BULB TO THE LIGHT FITTING.

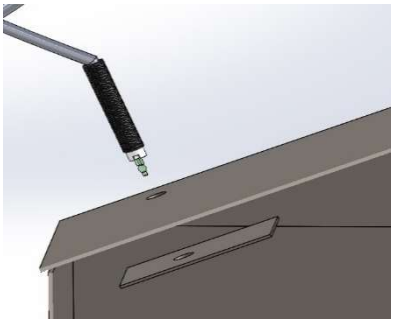

PUSH THE LIGHT FITTING THROUGH THE HOLE ON THE OUTER BOX AND INTO THE GAP BETWEEN THE PLATE AND OUTER BOX.

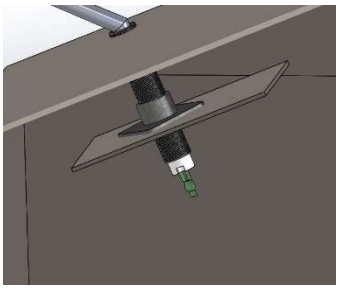

ATTACH THE SMALLER ROUND NUT AND ONE 50mm WASHER ONLY.PUSH THROUGH THE HOLE ON THE LIGHT PLATE ADJUST THE NUT AND WASHER PLACEMENT FOR BEST FIT.

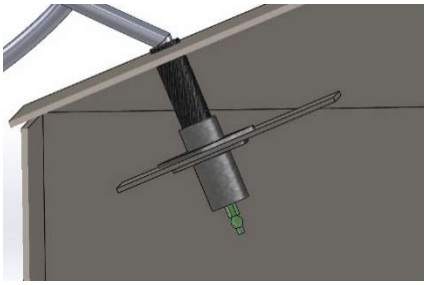

ATTACH ANOTHER 50mm WASHER. ON THE OTHER SIDE OF THE LIGHT PLATE AND USE THE LONGER NUT TO HOLD IN PLACE, THE END OF THE NUT SHOULD BE FLUSH WITH THE END OF THE LIGHT FITTING.

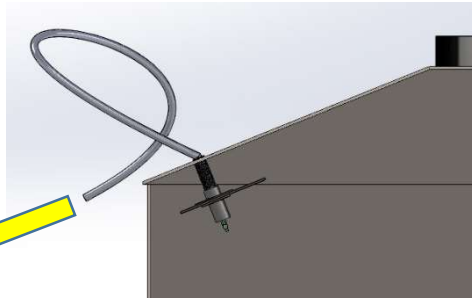

CONNECT 2x WHITE WIRES ON THE WIRING TO THE TRANSFORMER AND THE LIGHT WILL BE READY FOR USE

CONTRACTOR 1000 AND 1200

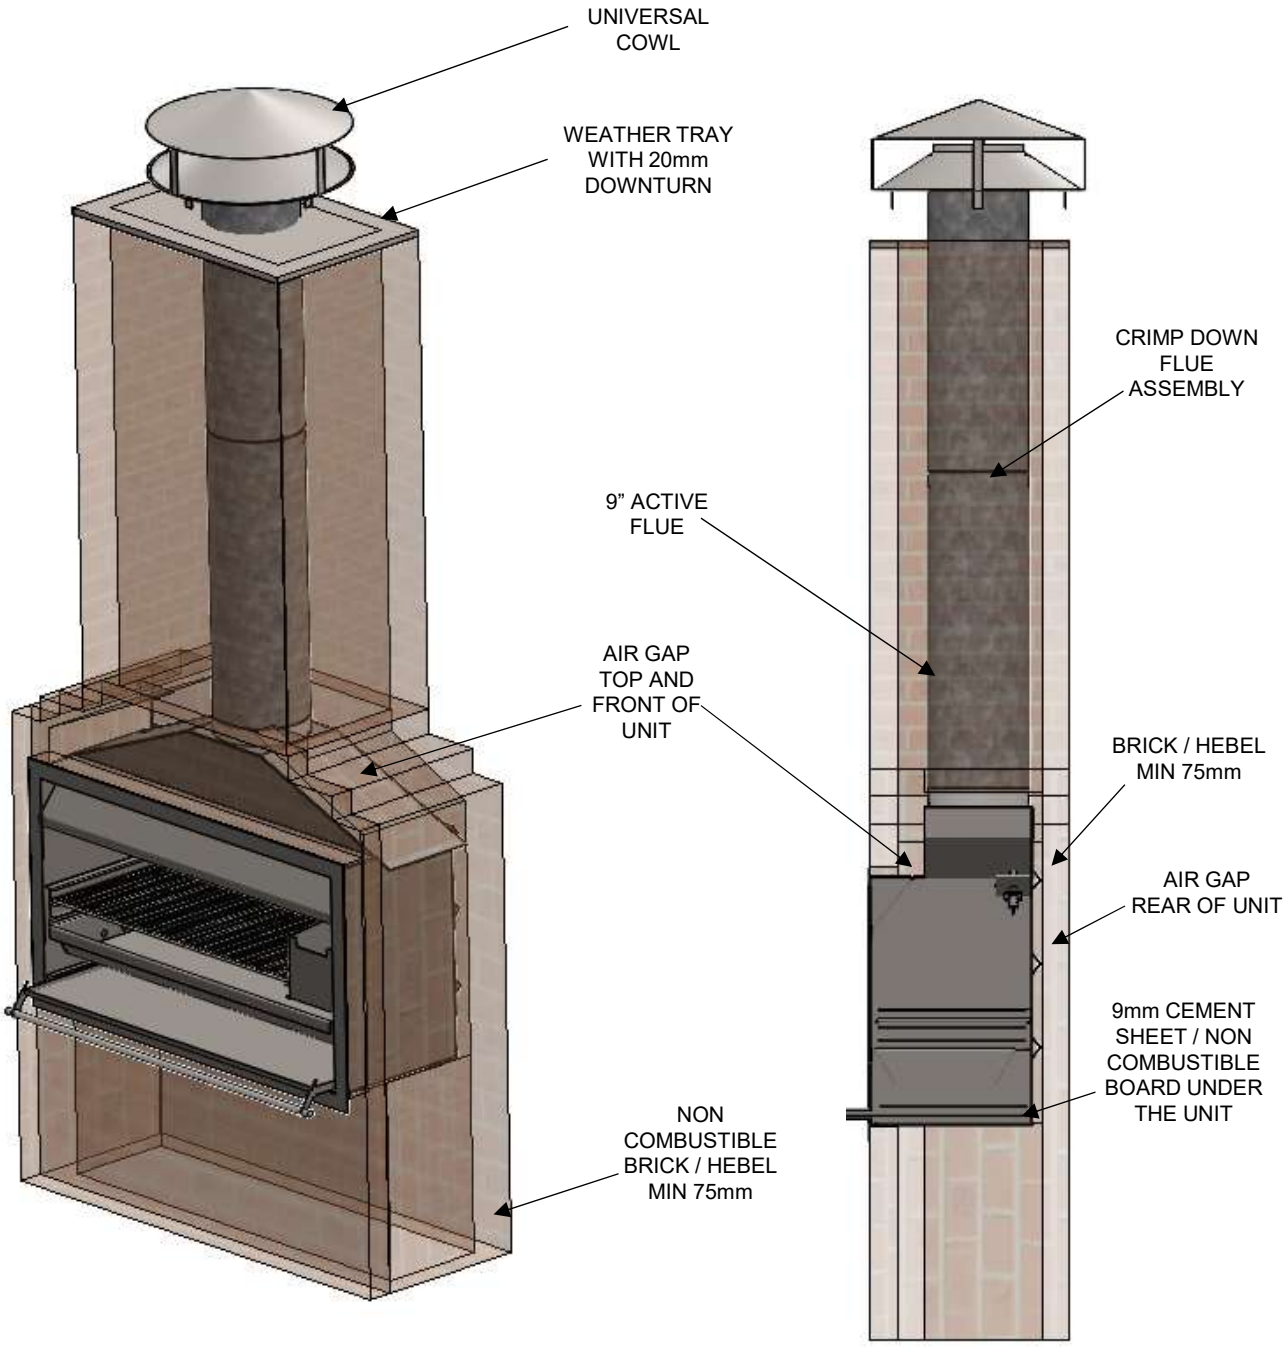

CONTRACTOR 1000 AND 1200

ALTERNATIVE BRICK CHIMNEY TERMINATION

SPLAYED RENDER TO DISPERSE RAIN WATER AWAY FROM TOP OF FLUE

FIBRE CEMENT COLLARS AROUND THE FLUE

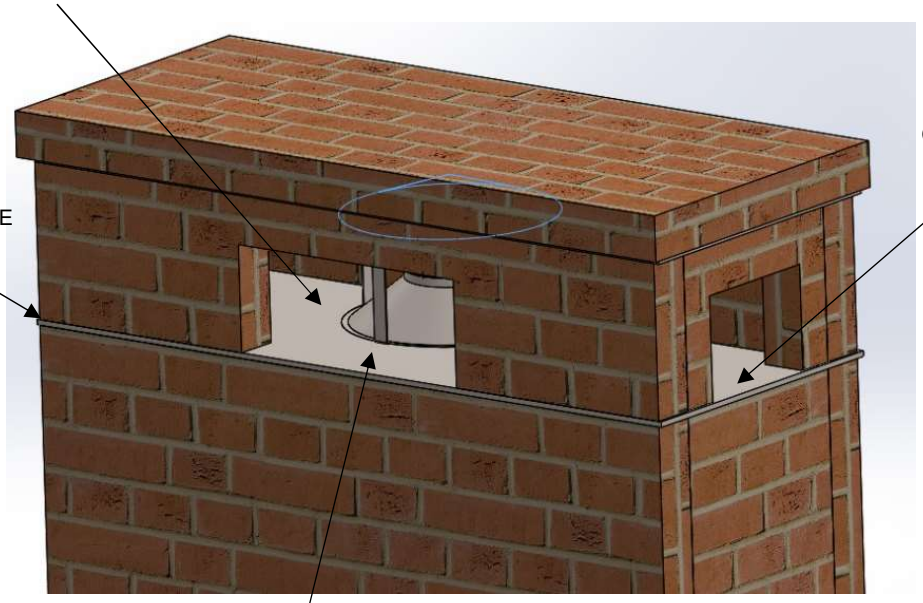

2 x 230mmx172mm CHIMNEY OPENINGS (MIN. SIZE)

2 x 230mmx172mm CHIMNEY OPENINGS (MIN. SIZE) NOTE: IF CHIMNEY IS MORE THAN 950mm WIDE ,THEN THE TWO OUTLETS ONLY ARE QUITE PRACTICAL ON THE LONG SIDE OF CHIMNEY – WIDTH OF OUTLET TO BE WIDENED IN ACCORDANCE WITH THE LENGTH OF THE CHIMNEY